RESTART

Installation Guide

No Rules. Just Results.™

53 Clark Road
Rothesay NB, Canada
E2E 2K9

1-800-561-8880
support@dplwireless.com
www.dplwireless.com

Equipment Supplied

Restart Harness

Power Harness

Configuration

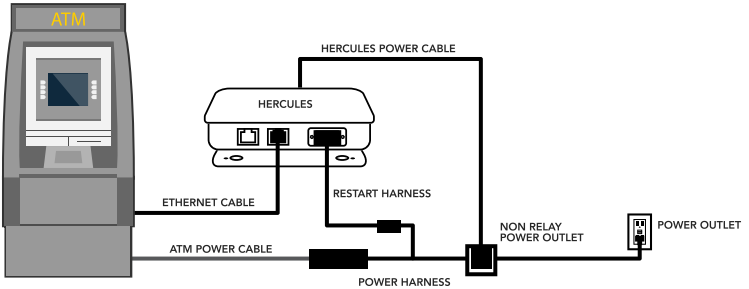

Connecting the Restart

Step 1
Connect the 15-pin adapter of the restart harness to the Hercules.

Step 2
Join the 2-pin connector of the power harness to the 2-pin connector of the restart harness.

Step 3
Plug the ATM's power cord into the black female end of the power harness and plug the male end of the power harness into a power outlet.

Note 1: The white unswitched power outlet can be used to power other items like the Hercules. Items plugged into it will not be power cycled when the restart command is sent.

Note 2: If also using the Protector, omit Step 2 and join the 2-pin connector of the power harness to the 2-pin connector of the Protector.

Using the Restart

Step 1
Log in to the Hercules Portal at https://hercules.dplwireless.com and search for the Terminal ID of the asset.

Step 2
Click on the Terminal in the list on the left to display its dashboard.

Step 3
Scroll down to view the ”Actions” section then click “Restart ATM”.

Step 4
Click “Yes” to restart the ATM now or schedule the action to be performed in the future.